
Relay protection channel delay time

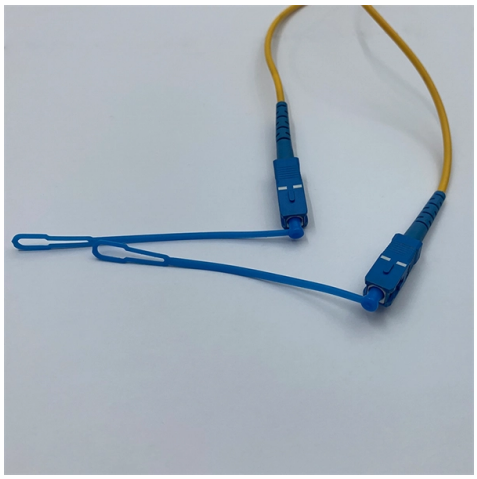

Overview

Microsoft Word Channel delay (one-way delay) is the total time witnessed between any actively communicating devices. Processing time, buffering time, netwo.

Key Takeaways

Relay protection channel delay is the latency in communication channels that can affect the speed and accuracy of protective relays in detecting and isolating faults.

Definition and Measurement

Relay protection channel delay occurs when signals transmitted between relays at different terminals of a line experience latency due to the communication medium. In phase comparison relay (PCR) systems, for example, each relay estimates the one-way channel delay by sending a signal to the remote relay and measuring the round-trip time, dividing it by two to obtain an average delay. This delay is then used to correct the phase comparison between local and remote voltage and current measurements to determine if a fault is internal or external to the line.

Asymmetrical or excessive delays can lead to incorrect tripping decisions, as seen in cases where leased third-party networks introduced inconsistent delays.

Typical Delay Ranges



© 2026 CJC FIBRE CONSULTANTS - All rights reserved

Modern teleprotection systems over dedicated fiber or TDM networks achieve very low latencies, typically 3 to 8 milliseconds for high-speed schemes like POTT (Permissive Overreaching Transfer Trip) or DCUB (Directional Comparison Unblocking). Older analog or asynchronous systems had delays of 8 to 12 milliseconds or more. The speed of the channel directly affects the relay's ability to clear faults quickly, which is critical for system stability, minimizing equipment damage, and maintaining power quality.

Impact on Protection SchemesChannel delays influence the performance of various protection schemes: Phase Comparison Relays (PCR): Sensitive to asymmetrical delays; incorrect delay estimation can cause false trips.

POTT and DCU

B Schemes: Designed to tolerate small propagation delays and channel asymmetry while maintaining high-speed fault clearing. Differential Protection: Relies on synchronized measurements; excessive delay can reduce sensitivity or selectivity.

Mitigation Strategies

To minimize the impact of channel delays: Use dedicated communication channels rather than leased or shared networks to reduce variability. Estimate and compensate for channel delay in relay algorithms, including directional comparison and phase shift corrections. Design protection schemes tolerant to small delays, such as POTT or DCUB, which can maintain security and dependability even with minor latency.

Regular testing and monitoring of communication channels to detect asymmetry or excessive latency.

Practical Considerations

Fast and reliable relay operation is essential to limit voltage dips, reduce post-fault load peaks, and maintain network stability. The total relay operating time includes channel delay, relay processing time, and breaker operation time. Proper coordination and safety margins are necessary to ensure selectivity and dependability, especially in networks with multiple relays and varying fault current magnitudes.

In summary, relay protection channel delay is a critical factor in the design and operation of modern protection systems, and careful measurement, compensation, and network design are required to ensure accurate and fast fault clearing.

© 2026 CJC FIBRE CONSULTANTS - All rights reserved

Article Content

Microsoft Word

Channel delay (one-way delay) is the total time witnessed between any actively communicating devices. Processing time, buffering time, network traffic, and hardware throughput all need to be taken into

Distribution Automation Handbook

The selectivity diagram is a set of specific time/current curves which shows all the time/current curves, that is, the operating characteristics of the relays of the concerned chain of protection relays.

Speed and Security Considerations for Protection Channels

This paper describes the communications requirements for various protection and control applications, including channel time, channel asymmetry requirements, and jitter.

Channel Performance Considerations for Ethernet Circuits Applied to ...

This report discusses the various considerations and explains why they are important to the protective relay applications. This document is intended to aid the protection engineer to communicate and

FEEDER PROTECTION CALCULATIONS & SETTINGS

Relay coordination is the process of selecting settings that will assure that the relays will operate in a reliable and selective way. In OC relays the coordination is based on the relay time-current

Lesson Learned

The PCR at each terminal periodically estimates the communication channel delay time by sending a signal to the remote relay, which then transmits the signal back. This “round-trip” signal

Basic protection relay knowledge

Definite time delay means that the protection operate time dose not change or depend on the fault type or the fault current magnitude. Inverse time delay, on the other hand, depends on the current

Communications Systems Performance Guide for Electric Protection

There are several aspects of the delay caused by communications transit time that are important to the protective relaying application. These should be discussed with the protection

© 2026 CJC FIBRE CONSULTANTS - All rights reserved

Channel Asymmetry Compensation for Line Current Differential

Since the time stamps of transmit and receive are known, the relays can precisely determine the one-way channel delay and any difference between the channel delays can be classified as channel

Protective Relaying Philosophy and Design Guidelines

Speed of a protective relay communication channel is a measure of the time it takes to assert an ele-ment in the receiving relay after a logic status change is initiated in the transmitting relay.

Power System Protective Relays: Principles & Practices

A time-delay relay that serves in conjunction with the device that initiates the shutdown, stopping, or opening operating in an automatic sequence or protective

Protection Basics

Protection System Elements Protective relays Circuit breakers CTs and VTs (instrument transformers) Communications channels DC supply system Control cables

Basics of Protective Relaying and Design Principles

Thus, as in the case of the overcurrent protection, the impedance relay should trip the faults located farther than 80 % after certain time delay. Therefore, a typical relay incorporates not one, but several

How to calculate relay settings for IEC 61850-9-2 Sampled ...

Therefore, it is essential to balance N with the protection system time performance; for example, N = 3 causes an additional 4-sample delay (N + 1).

C37.113-2015

Information on the concepts of protection of ac transmission lines is presented in this guide. Applications of the concepts to accepted transmission line-protection schemes are also

Principles and Characteristics of Distance Protection

Distance protection, in its basic form, is a non-unit system of protection offering considerable economic and technical advantages. Unlike

Assessment of Communication Channel Effects on Time-Domain Protection ...

Abstract—This paper investigates the effects of communication channel latency (CCHL) on time-domain line protection functions. The Alternative Transients Program (ATP) was used to simulate the

© 2026 CJC FIBRE CONSULTANTS - All rights reserved

IEEE Guide for Protective Relay Applications to Transmission Lines

Many important issues, such as coordination of settings, operating times, characteristics of relays, mutual coupling of lines, automatic reclosing, and use of communication channels, are examined.

Related Video Reference

This video was associated with the source search result. Verify technical details against current product documentation and project requirements.

Contact Us

Continue your research online:

Website: https://cjcconsultants.co.za
Technical inquiry: https://cjcconsultants.co.za/contact.html

This document is for preliminary research. Verify specifications against current standards, product documentation and project requirements.

© 2026 CJC FIBRE CONSULTANTS - All rights reserved